



Bluetooth APP Guide 5.1KW FL1004U

# Technique Document

Document Title Bluetooth APP Guide

Code: 5.1KW FL-1004U

Version: V1.1

**PRODUCT GUIDE**



Bluetooth APP Guide 5.1KW FL1004U

Manual

1 Basic Info .....	2
1.1 Fitting Range .....	2
1.2 Target .....	2
2 Manipulating Guide.....	2
2.1 APK APP Download .....	2
2.2 Logging .....	4
2.3 Connect to the Device .....	4
2.4 APP Main Interface App .....	5
2.5 Other Interface .....	9



# 1 Basic Info

This Bluetooth APP can be operated by both Android and IOS. It establish a Bluetooth connection between your smart phone and the battery, usages includes below: managing the battery pack, gathering the data and displaying them, conducting modifications on settings.

Bluetooth APP can achieve below functions:

- 1) Display the basic data of battery pack
- 2) Modifying the communication between BMS and inverter
- 3) Setting Alert Parameters and Switch on/off
- 4) Support Single and Parallel operation
- 5) Shift between Chinese and English

## 1.1 Fitting Range

This guidebook fits below BMS:

- EMU1101 V14 (24V~48V)
- EMU1101 V15 (24V~48V)
- EMU1203 (24V~48V)

## 1.2 Target



This guidebook is for every users of CNEnergy BMS.

# 2 Manipulating Guide

## 2.1 APK APP Download



Android	<a href="https://www.pgyer.com/1a8ce42e6c1a9f2d37dcaa6a790e40c2">https://www.pgyer.com/1a8ce42e6c1a9f2d37dcaa6a790e40c2</a> View next page, scan the QR code
---------	---

Bluetooth APP Guide 5.1KW FL1004U

<p>QR code</p>	 <p>Download the ap and install on cell phone</p>
<p>Latest version</p>	<p>V1.0.26</p>
<p>ISO</p>	<p>Search' EN BMS' in APP stores</p>
<p>Search Interface</p>	

## 2.2 Logging



### Bluetooth APP Guide 5.1KW FL1004U

Notice	<p>1、click the APP icon twice to start it.</p> <p>2、log your username and password (Default user: admin Default password: 111111)</p> <p>3、Click ‘Login’ Step1~3see2.2.1</p> <p>4、click “English”</p>
Login Interface	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>2.2.1</p> </div> <div style="text-align: center;">  <p>2.2.2</p> </div> </div>

## 2.3 Connect to the Device

Tips	<p>1、 see 2.3.1, after login in, the name of your device will be displayed on the ‘device’ interface.</p> <p>-Single Operation: Displays BP00</p> <p>-Parallel Operation:</p> <p>2、 see 2.3.2, click ’ BP00’ to connect</p> <p>3、 BlueTooth signal can be unstable, please click ‘search for device again’ .</p>
------	--

### Bluetooth APP Guide 5.1KW FL1004U
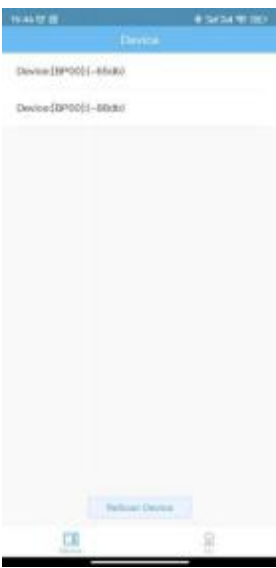
<p>Connection Interface</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>2.3.1</p> </div> <div style="text-align: center;">  <p>2.3.2</p> </div> </div>
-----------------------------	--

## 2.4 APP Main Interface APP

<p>Tips</p>	<p>1、 Main Interface can display information of single operation and parallel operation</p> <p>2、 Single mode can switch: BP00 (master)、BP01~BP15 (slave); status bar 6 displays ‘parallel-BP XX’</p> <p>3、 In parallel mode, status bar 6 displays ‘parallel-parallel’</p> <p>4、 In parallel mode, status bar 1~4 displays the summary of data, bar 5 displays the communication type between master machine BP00 and inverter, bar 6 displays.</p> <p>only the condition of parallel, other settings is forbidden.</p> <p>5、 In single mode, status bar 2~5 displays the data of the selected machine, bar 6 displays the number of selected machines, ‘Device Specification’ , ‘Configuration Parameter’ , ‘Switch Setting’ . ‘Configuration Parameter and Switch Setting can be viewed and modified.</p>
-------------	--

### Bluetooth APP Guide 5.1KW FL1004U

Main interface

2.4.1

2.4.4

**Status bar1:** Displays Single/Parallel condition and Blue Tooth Condition

**Status bar2:** Displays the number of batteries in series, SOC, voltage, current, remained capacity, working

**Status bar3:** Alert and Protection statistics, click to view specifications. Alert: see 2.4.2 Protection: see 2.4.3. Click 'Alert Specification- Protection Specification' to view more data,

**Status bar4:** Basic information. Displays single machine

**Status bar5:** Inverter Connection Protocol and Setting  
 -CAN: Support 6 types of essential options and 10 types of protocols  
 -485: Support 5 types of RS485 protocols


**Status bar6:** Displays Parallel/ Single condition, shift master and slaves, see 2.4.4.

**Device details:** Can show specification of battery pack in Single mode (high light) Click to view specification, see 2.4.5

**Configuration Parameter:** Can display and configurate the parameters of battery pack in Single mode (high light). Click to view specification, see 2.4.6

**Switch(on/off):** Can switch the battery pack on and off in Single mode(high light). Click to view specification, see 2.4.7

Bluetooth APP Guide 5.1KW FL1004U

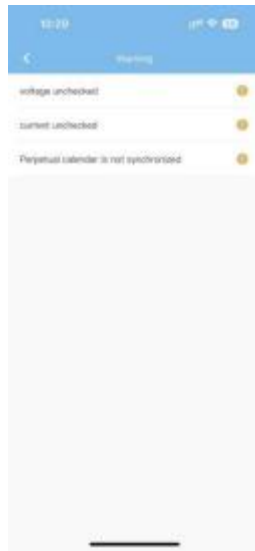

2.4.2



2.4.3



2.4.5

1. Show highest/lowest voltage of all cells, voltage of each cell.
2. Show highest/lowest temperature of all cells, temperature of each cell.
3. Display Show Manufacturer Information CAN or RS485 communication, protocol with inverter.  
Component Type: type of client's panel.  
Software Version: version of BMS software.  
Protocol Version: version of communication protocol between BMS and APP.




Bluetooth APP Guide 5.1KW FL1004U



1. In Single mode (see 2.4.4, shift between Single mode and Parallel mode), click 'Edit' (see 2.4.6- 1), enter password 111111 (see 2.4.6-2) and set the configuration parameter, then click 'Save'.
2. After clicking 'Save', system will notice 'Confirm Modification?', your modification will be conducted by BMS. after you confirm.

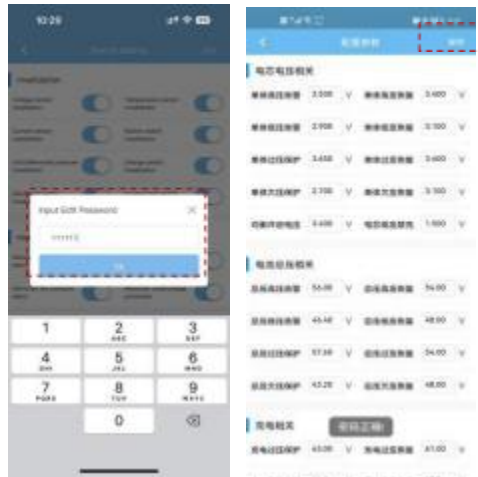


2.4.6- 1



2.4.6-2

图 2.4.6-3

### Bluetooth APP Guide 5.1KW FL1004U

	 <p style="text-align: center;">2.4.7-1</p>  <p style="text-align: center;">2.4.7-2</p>	<p>1. In Single mode (see 2.4.4, shift between Single mode and Parallel mode), click 'Edit' (see 2.4.7- 1), enter password 111111 (see 2.4.7-2) and set the configuration parameter, then click 'Save'. (See 2.4.7-3)</p> <p>2. After clicking 'OK', system will notice 'Confirm Modification?', your modification will be conducted by BMS after you confirm.</p>  <p style="text-align: center;">2.4.7-3</p>
--	--	--

## 2.5 Other Interface

<p>Tips</p>	<ol style="list-style-type: none"> <li>1、About Use Setting Password and Logout’ , see2.5.1</li> <li>2、Click ‘About Us’ , like2.5.2</li> <li>3、Click Setting Password ‘to change your password.</li> <li>4、Click OK to save your settings.</li> </ol>
-------------	--

Bluetooth APP Guide 5.1KW FL1004U


Screenshot



2.5.1



2.5.2

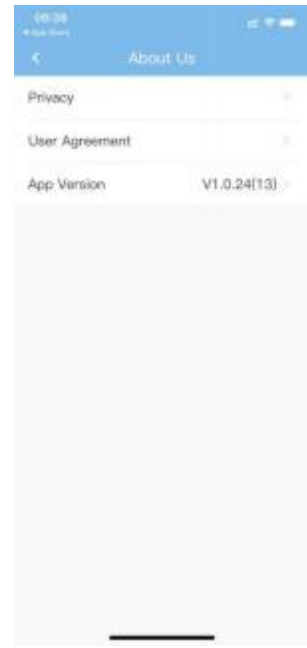

2.5.3